

Installing CyntrX Flex ELD with Existing CyntrX HD Device


Record CyntrX serial number
(SN) before installation

920.338.0479
for assistance



BEFORE INSTALLATION

Please check the diagnostic port on the vehicle and follow instructions based on the plug type shown in the photos below:

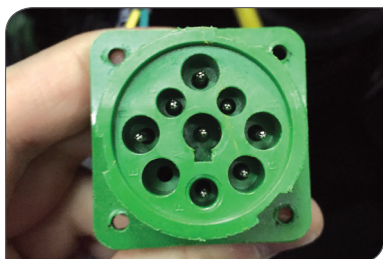

Install Guide

1



Install Guide

2

**WARNING: This installation will be adding an ELD device.
DO NOT remove already installed CyntrX HD tracking device!**

*Installation supplies included: Velcro and tie wraps to secure device at install.


*Use tie wrap to secure device to power cable.



Locate the factory diagnostic plug.

Please note the following:


- The factory diagnostic plug is connected to the CyntrX HD Y cable and is not mounted in the factory bracket.
- The factory diagnostic plug may be black or green in color.
- Do not remove the CyntrX HD plug currently mounted in the factory bracket.

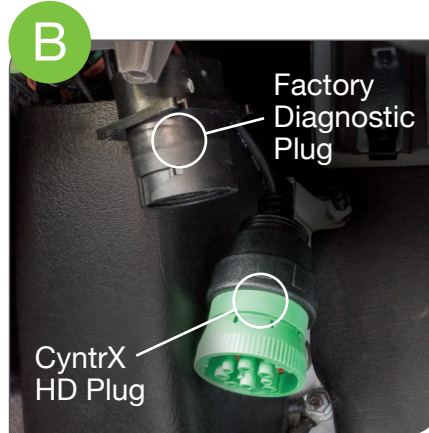

Disconnect the HD cable from the factory diagnostic plug.



Take the Flex device and plug it into the Flex Y cable.

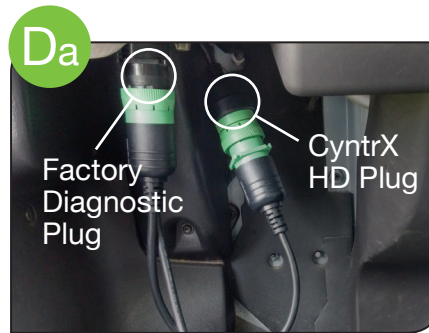

Plug the male end of the Flex Y cable into the factory diagnostic plug and the female end into the HD plug.

Please note the following:

- After the Flex Y cable is attached, be sure to twist the locking rings on both male plugs until they snap in place.
- LED on the Flex device will begin flashing green once it has locked onto GPS and Cellular.



Secure any hanging wires into the dash.



Before completing the installation (putting dash back together), call activation hotline to verify the required information of the vehicle. **Have the CyntrX serial number (SN) available before calling 920-338-0479.**


Step 1: Power Cable



Locate the factory diagnostic port. Disconnect port from dash.



Connect the male end of the power cable to the diagnostic port.

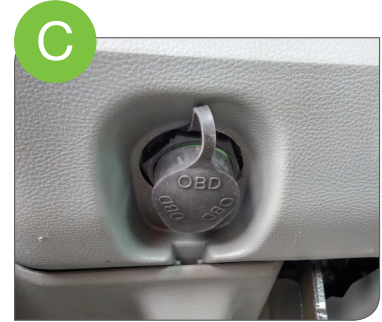

Install the female end in the original factory port location.

Please note the following:

- After cable is attached, be sure to twist locking ring on power cable until it snaps in place.
- Factory screw holes may not match up to female end of power cable.
- A Universal Locking Ring has been provided to secure it to the factory port location if needed.

Step 2: Tracking Device



Attach power cable to tracking device.

E Verify power has been supplied by watching for red LED to illuminate and start flashing.

NOTE: LED will begin flashing green once device has locked onto GPS and Cellular.

G Use tie wrap to secure device to power cable.

F **Installation supplies included:** Velcro and tie wraps to secure device at install.

H **Make sure device is mounted horizontally inside the dash (closest to the windshield as possible) for optimal GPS reception. Avoid mounting near large bundles of wires.**



Secure any hanging wires into the dash.



Before completing the installation (putting dash back together), let truck idle for 5 minutes and call activation hotline to verify the required info of the vehicle. **Have the CyntrX serial number (SN) available before calling 920-338-0479.**