

Installation of CyntrX Flex

Record CyntrX serial number
(SN) before installation

920.338.0479
for assistance





Step 1: Power Cable

- A. Locate the factory diagnostic port. Disconnect port from dash.
- B. Connect the male end of the power cable to the diagnostic port.

NOTE: After cable is attached, be sure to twist locking ring on power cable until it snaps in place. Factory screw holes may not match up to female end of power cable. A Universal Locking Ring has been provided to secure it to the factory port location if needed.

- C. Install the female end in the original factory port location.

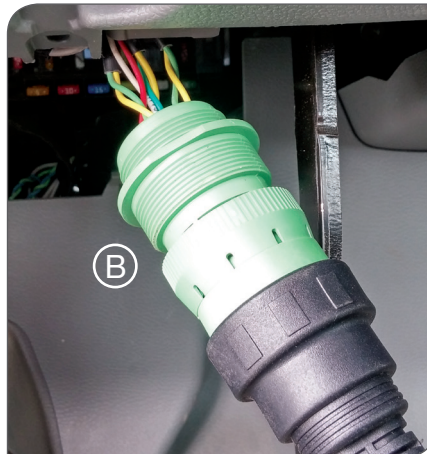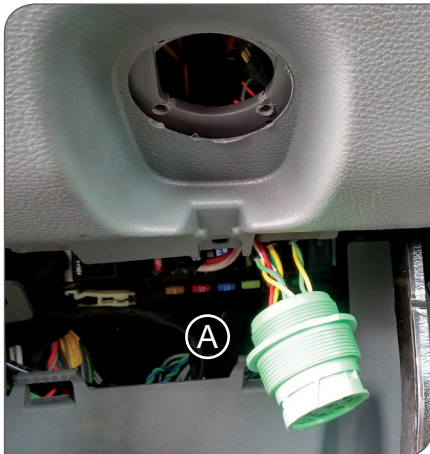

Step 2: Tracking Device

- E. Attach power cable to tracking device.
- F. Verify power has been supplied by watching for red LED to illuminate and start flashing.
NOTE: LED will begin flashing green once device has locked onto GPS and Cellular.
- G. Installation supplies included: Velcro and tie wraps to secure device at install.
- H. Use tie wrap to secure device to power cable.
- I. **Make sure device is mounted horizontally inside the dash (closest to the windshield as possible) for optimal GPS reception. Avoid mounting near large bundles of wires.**
- J. Secure any hanging wires into the dash.
- K. Before completing the installation (putting dash back together), let truck idle for 5 minutes and call activation hotline to verify the location of the vehicle. **Have the CyntrX serial number (SN) available before calling 920-338-0479.**



For more assistance, please contact CyntrX at 920-338-0479.